


# X80XX User Guide v1.3


## First Step: Open DVR

1. Take out the DVR from package box ;
2. Take out screwdriver from package box ;
3. Take off the screw on DVR with screwdriver ;
4. Elevate the topper cover, and then push it back forward to take off the top cover.

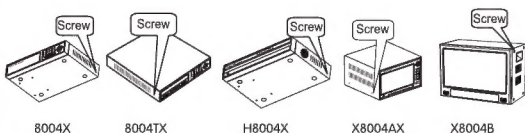

## Second Step: Install HDD

1. Setting HDD jump line switch to :main HDD ;
2. Take out fixing board from DVR ;
3. Fixup HDD to fixing board ;
4. Insert data cable and power supply cable Between HDD and main board ;
5. Put HDD into DVR acilicly. Tighten it by screwdriver.

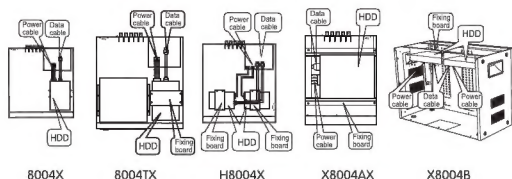


## Third step: ON/OFF , simple connection


1. Take out the adapter from the accessory box, then insert to plug-in power outlet. Power LED(yellow)will light;
2. Connect the DC+19v with the power outlet of the case back ;
3. Connect the AV signal port with Audio in and Video in port congruently;
4. Connect Audio out with Audio out  
Connect Video out port to monitor;
5. Remote control fitted with battery ;
6. W8004AP/W8008AV antennas will be fixed at the port of ANT1 and ANT2 ;
7. After making sure all the connect device is ok, open the "ON" switch of case back to start the DVR, then set function(basic operation refer to the manual);
8. You can only press " " to turn on/off LCD for DVR with hidden TFT LCD ;
9. "LCD ON/OFF" on front pannel only applies for fixed TFT LCD. It's not DVR power switch.

## Special Note:

 
1. LCD monitor should be turned off when it is not being watched for one hour. Long time LCD working will cause its damage!
2. Part of the models offer 4 groups of DC12V/300mA power output. It is forbidden to connect equipments more than the standard. Or else, host will not work properly!




8004VP Rear Panel

 


H8004V Rear Panel

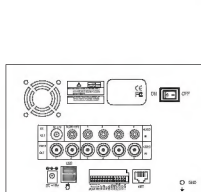


8004AP Rear Panel

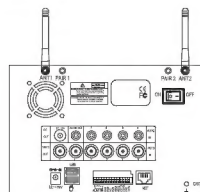

W8004AP Rear Panel

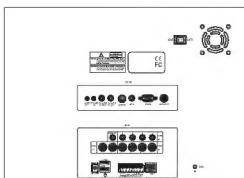

8004B Rear Panel

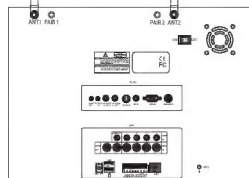

W8004B Rear Panel